



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 7-Apr-18, Pattern Type, Pattern Difficulty, Pattern Designer SEAN PARRY, Pattern Volume (ml) 26.16

Surface Information

Surface Type, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name PBA Don Carter 39, Mode Clean & Oil, Forward Speed Max Clean, Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern No


Supplies Information

Lane Cleaner MAX 10, Cleaner Mixture Ratio 10 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 53 Envoy, Lane Conditioner DEFY30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 35 columns (7 Pin Side and 10 Pin Side).

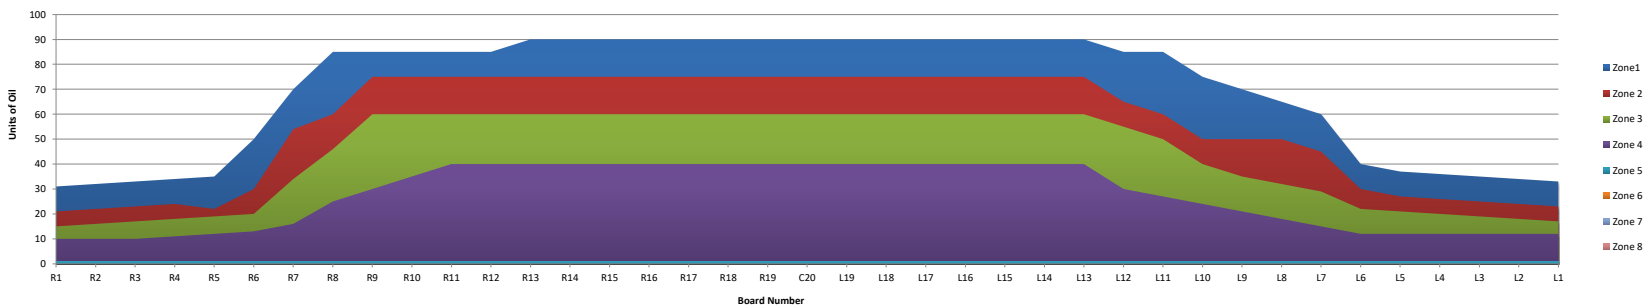



PBA Don Carter 39


Crosswise Ratios (by units)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L Left = 41.6	2.1		3L-7L Left = 1.0	1.0	
3R-7R Right = 44.4	2.0		3R-7R Right = 1.0	1.0	
18L-18R Center = 90.0			18L-18R Center = 1.0		
Zone 2			Zone 6		
3L-7L Left = 30.6	2.4		3L-7L Left = 0.0	#DIV/0!	
3R-7R Right = 30.6	2.4		3R-7R Right = 0.0	#DIV/0!	
18L-18R Center = 75.0			18L-18R Center = 0.0		
Zone 3			Zone 7		
3L-7L Left = 22.2	2.7		3L-7L Left = #DIV/0!	#DIV/0!	
3R-7R Right = 21.6	2.7		3R-7R Right = #DIV/0!	#DIV/0!	
18L-18R Center = 60.0			18L-18R Center = #DIV/0!		
Zone 4			Zone 8		
3L-7L Left = 12.6	3.1		3L-7L Left = #DIV/0!	#DIV/0!	
3R-7R Right = 12.4	3.2		3R-7R Right = #DIV/0!	#DIV/0!	
18L-18R Center = 40.0			18L-18R Center = #DIV/0!		

Crosswise Ratios (by ml)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L Left = 0.174	2.1		3L-7L Left = 0.000	#DIV/0!	
3R-7R Right = 0.186	2.0		3R-7R Right = 0.000	#DIV/0!	
18L-18R Center = 0.377			18L-18R Center = 0.000		
Zone 2			Zone 6		
3L-7L Left = 0.128	2.4		3L-7L Left = 0.000	#DIV/0!	
3R-7R Right = 0.128	2.4		3R-7R Right = 0.000	#DIV/0!	
18L-18R Center = 0.314			18L-18R Center = 0.000		
Zone 3			Zone 7		
3L-7L Left = 0.047	2.7		3L-7L Left = 0.000	#DIV/0!	
3R-7R Right = 0.045	2.7		3R-7R Right = 0.000	#DIV/0!	
18L-18R Center = 0.126			18L-18R Center = 0.000		
Zone 4			Zone 8		
3L-7L Left = 0.026	3.1		3L-7L Left = 0.000	#DIV/0!	
3R-7R Right = 0.026	3.2		3R-7R Right = 0.000	#DIV/0!	
18L-18R Center = 0.084			18L-18R Center = 0.000		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

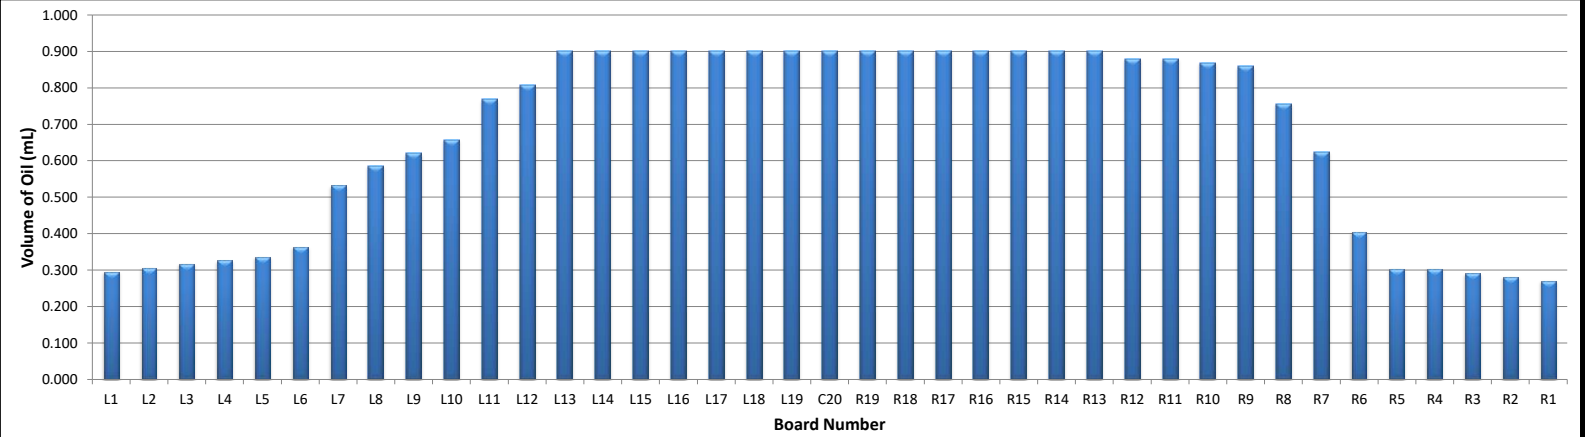

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
2.40	1	2.34

