



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 21-Apr-17

Pattern Type: Sport

Pattern Difficulty: High

Pattern Designer:

Pattern Volume (ml): 24.02

Pattern Parameters

Pattern Number:

Pattern Name: SHAWNEE BADGER 2017

Mode: Clean & Oil

Forward Speed: Max Clean

Start Cleaner Spray: 0

Start Squeegee: 0

Start Oiling: 6

Split Pattern: No

Supplies Information

Lane Cleaner: MAX 10

Cleaner Mixture Ratio: 10 : 1

Cleaner Transition Distance: Authority22

Cleaner Spray End Distance: 53 Envoy

Lane Conditioner: DEFY30

Surface Information

Surface Type: Synthetic


Surface Brand: Brunswick Pro Lane

Age:

Notes:

	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone End Distance	11	18	22	29	40	52		
Zone Ratio	L 2.0 : 1	2.0 : 1	2.0 : 1	2.0 : 1	2.0 : 1	### : 1	### : 1	### : 1
	R 2.0 : 1	1.9 : 1	2.0 : 1	2.0 : 1	2.0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	11.21	5.69	2.32	2.40	2.40	0.00	0.00	0.00

ZONE	7 Pin Side																	Board Number												10 Pin Side									
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	43	43	43	43	43	43	43	43	48	58	81	81	81	81	81	86	86	90	90	90	90	90	86	86	72	69	66	63	63	48	48	48	48	43	43	43	43	43	43
2	35	35	35	35	35	35	35	35	38	41	60	65	65	65	65	70	70	70	70	70	70	70	70	52	52	52	52	52	40	40	40	40	40	35	35	35	35	35	35
3	25	25	25	25	25	25	25	25	28	28	40	40	40	40	45	50	50	50	50	50	50	50	50	45	45	45	45	45	25	25	25	25	25	25	25	25	25	25	25
4	15	15	15	15	15	15	15	15	15	15	21	24	24	27	27	30	30	30	30	30	30	30	30	25	25	25	25	25	15	15	15	15	15	15	15	15	15	15	15
5	10	10	10	10	10	10	10	10	10	10	10	15	15	15	15	20	20	20	20	20	20	20	20	15	15	15	15	10	10	10	10	10	10	10	10	10	10	10	10
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7																																							
8																																							

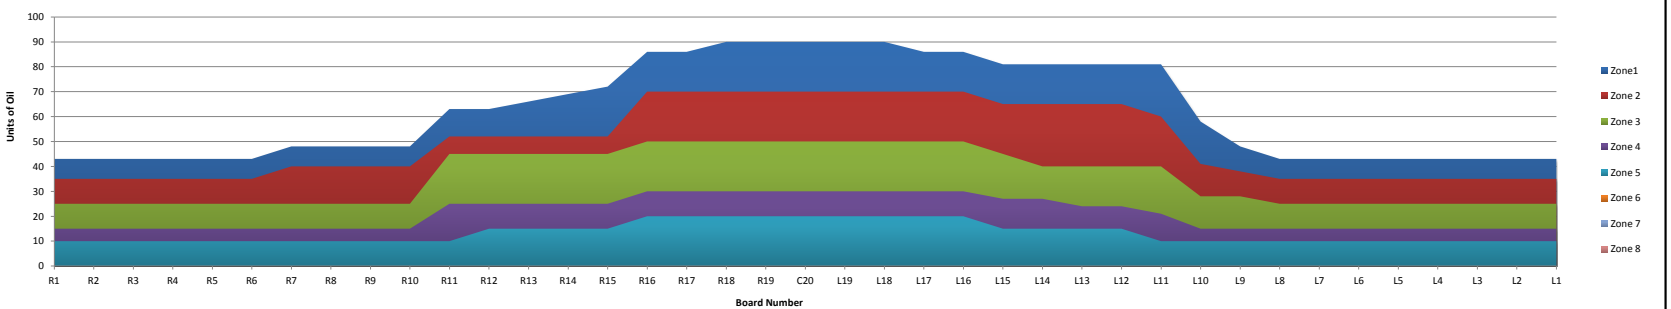



SHAWNEE BADGER 2017


Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 43.0	2.0	3L-7L	Left = 10.0	2.0
3R-7R	Right = 44.0	2.0	3R-7R	Right = 10.0	2.0
18L-18R	Center = 90.0		18L-18R	Center = 20.0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 35.0	2.0	3L-7L	Left = 0.0	#DIV/0!
3R-7R	Right = 36.0	1.9	3R-7R	Right = 0.0	#DIV/0!
18L-18R	Center = 70.0		18L-18R	Center = 0.0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 25.0	2.0	3L-7L	Left = #DIV/0!	#DIV/0!
3R-7R	Right = 25.0	2.0	3R-7R	Right = #DIV/0!	#DIV/0!
18L-18R	Center = 50.0		18L-18R	Center = #DIV/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15.0	2.0	3L-7L	Left = #DIV/0!	#DIV/0!
3R-7R	Right = 15.0	2.0	3R-7R	Right = #DIV/0!	#DIV/0!
18L-18R	Center = 30.0		18L-18R	Center = #DIV/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0.198	2.0	3L-7L	Left = 0.046	2.0
3R-7R	Right = 0.203	2.0	3R-7R	Right = 0.046	2.0
18L-18R	Center = 0.415		18L-18R	Center = 0.092	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0.103	2.0	3L-7L	Left = 0.000	#DIV/0!
3R-7R	Right = 0.106	1.9	3R-7R	Right = 0.000	#DIV/0!
18L-18R	Center = 0.205		18L-18R	Center = 0.000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0.042	2.0	3L-7L	Left = 0.000	#DIV/0!
3R-7R	Right = 0.042	2.0	3R-7R	Right = 0.000	#DIV/0!
18L-18R	Center = 0.084		18L-18R	Center = 0.000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0.044	2.0	3L-7L	Left = 0.000	#DIV/0!
3R-7R	Right = 0.044	2.0	3R-7R	Right = 0.000	#DIV/0!
18L-18R	Center = 0.088		18L-18R	Center = 0.000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

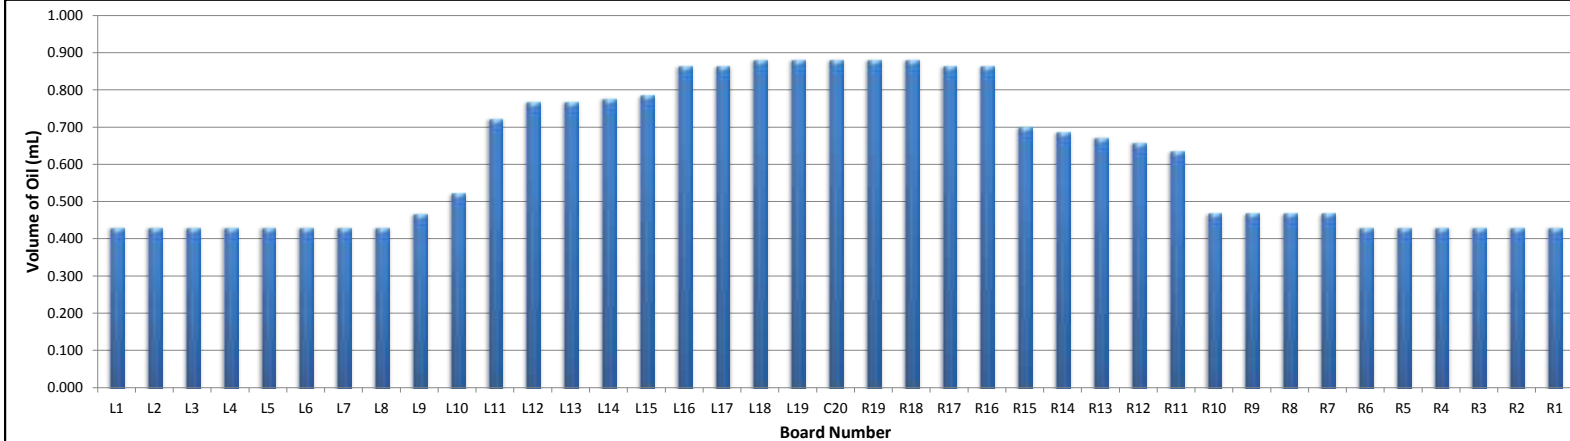

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
2.04	1	2.01

